



WEATHERBEATER™ FLOOR LINERS


PT #16061

USE AND INSTALLATION INSTRUCTIONS FOR YOUR 2ND SEAT FLOOR LINER

Thank you for selecting a Weatherbeater® Floor Liner from Husky Liners. Your new second seat liner is custom molded to fit your specific vehicle. The liner is made to take the place of your factory floor mat(s). **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the trunk of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will accelerate the process.

Your liner is made from an engineering resin that is lightweight and extremely tough and . The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

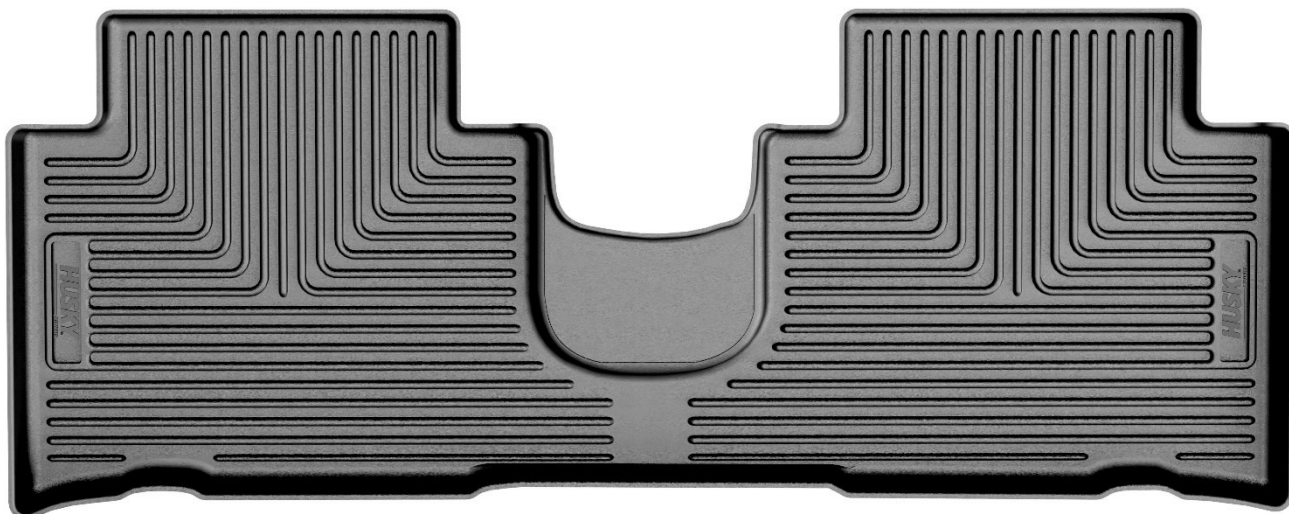



WEATHERBEATER™ FLOOR LINERS

PT #16061

TO INSTALL YOUR SECOND SEAT LINER, FIRST MOVE YOUR FRONT ROW SEATS COMPLETELY FORWARD. THEN, INSTALL YOUR NEW LINER, POSITIONING IT IN THE VEHICLE AS SHOWN ABOVE. LASTLY, REPOSITION YOUR FRONT ROW SEATS AS DESIRED.

SOME VEHICLES AND TRIM PACKAGES WILL HAVE A MOVING FRONT SEAT CONSOLE. A TRIM GROOVE IS PROVIDED TO REMOVE THE AREA OF THE LINER TO ACCOMMODATE THIS MOVING CONSOLE.

