

Installation Instructions

I - Sheet Number INS-HS129 Rev.A



Hood Shield

**For proper installation and best possible fit, please read all instructions BEFORE you begin.
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-344-8759.**

Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly anchored to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents **NOTE:** Actual product may vary from illustration.



Hood shield



Scrivet
x4



Fastener
Assembly
x2




Bump On x4


Tools Required



Car Wash Supplies

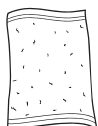

Clean Towel

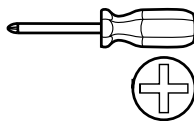

Phillips screwdriver



Grease pencil




Tape

Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash your vehicle's hood to remove any debris and/or dirt.
- Dry the hood with a clean towel.


Installation Steps **NOTE:** Actual application may vary slightly from illustrations.

Raise hood.

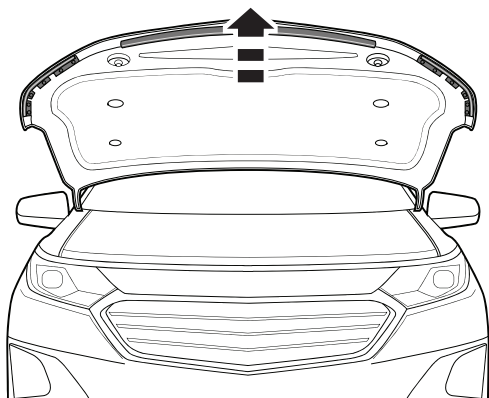

1

Test fit hood shield in place. Note where hood shield flanges align with the factory installed weatherstrip in (6) locations. Mark all locations with a grease pencil. Remove hood shield.

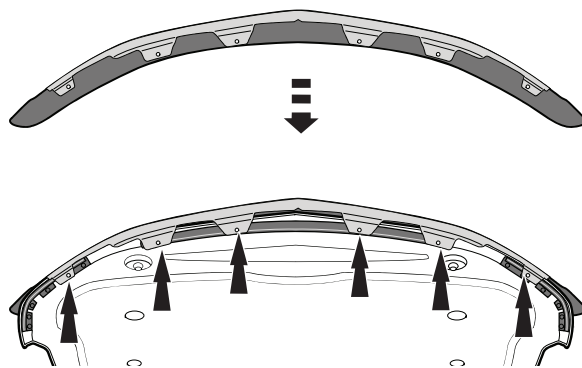

2


Installation Steps

NOTE: Actual application may vary slightly from illustrations.

Remove the factory weatherstrip retainers at the locations marked in **Step 2** to expose holes in hood.




NOTE: Use caution not to damage weatherstrip.

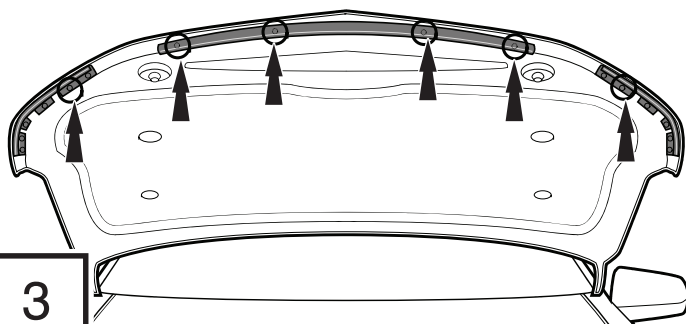


3

Carefully lift the weatherstrip away from the hood surface at the same (6) locations to expose holes in hood.

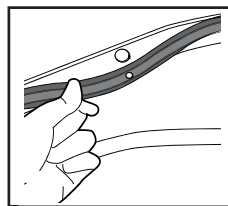


NOTE: Use caution not to damage weatherstrip.

4

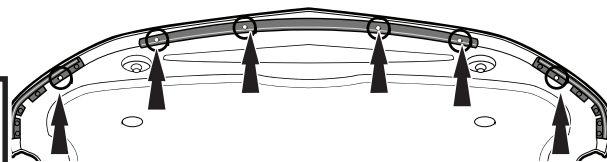

Center hood shield in place and align hood shield flange holes with holes in hood.
Note that hood shield flanges slide **UNDER** the weatherstrip

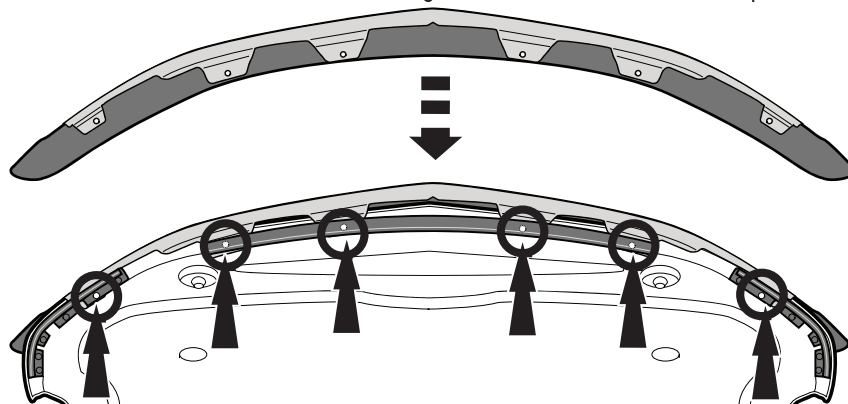


5




NOTE: Use caution not to damage weatherstrip.



Insert a Scrivet through weatherstrip, through hood shield, and into hood at each of the (4) center INBOARD locations.
Tighten screws.

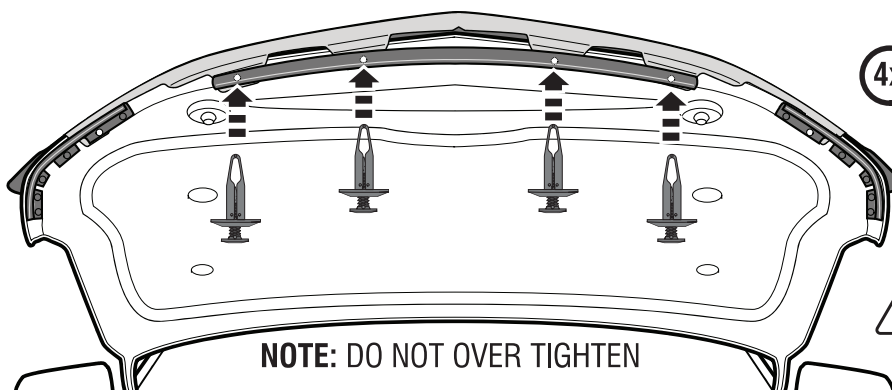


4x

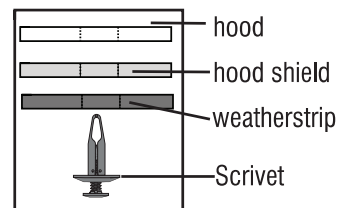


NOTE: Use caution not to damage weatherstrip.

6


NOTE: DO NOT OVER TIGHTEN

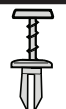

Separate Fastener Assembly into two pieces.

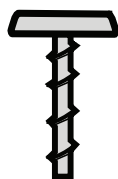

male portion

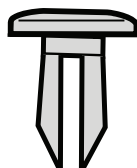

female portion



7

Installation Steps


NOTE: Actual application may vary slightly from illustrations.



Press the female portion of the Fastener Assembly through the hood shield and into the hood. (If necessary use tape to hold them firmly in place.) Reposition the weatherstrip, and insert the male portion of the Fastener Assembly into the female portion at each of the (2) OUTBOARD locations. Tighten fasteners.

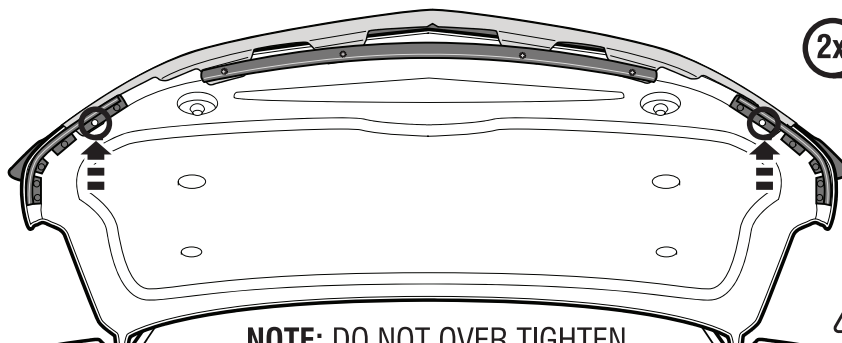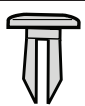

2x

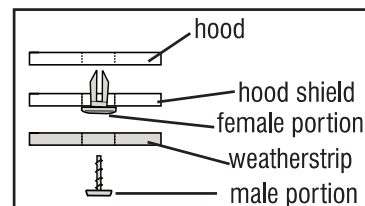


8

NOTE: DO NOT OVER TIGHTEN



NOTE: Use caution not to damage weatherstrip.


Close hood.

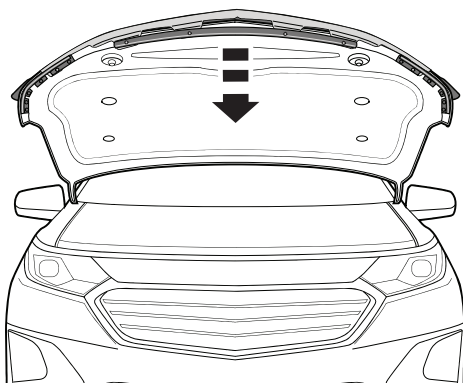

9



Apply bump ons to surface of hood.

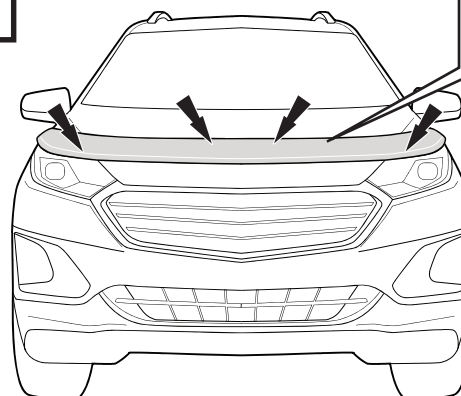

10

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



Congratulations!

You have purchased one of the many quality Husky® branded products. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



1-800-344-8759 • Visit us at huskyliners.com

© 2024 Husky Liners, Inc. All rights reserved.

Husky® and the Husky® logo are trademarks of Husky Liners, Inc.