

# Installation Instructions

I - Sheet Number INS-HS137 Rev.-



## Hood Shield

**For proper installation and best possible fit, please read all instructions BEFORE you begin.  
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-344-8759.**

### Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

### Contents


**NOTE:** Actual product may vary from illustration.



Hood shield



Alcohol pad x2

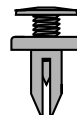

Fastener x4



Bump On x2


### Tools Required




Car Wash Supplies



Clean Towel

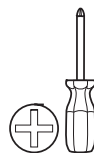

Phillips  
screwdriver

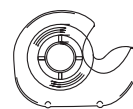

Tape (Optional)


### Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

### Installation Steps


**NOTE:** Actual application may vary slightly from illustrations.

Open hood.

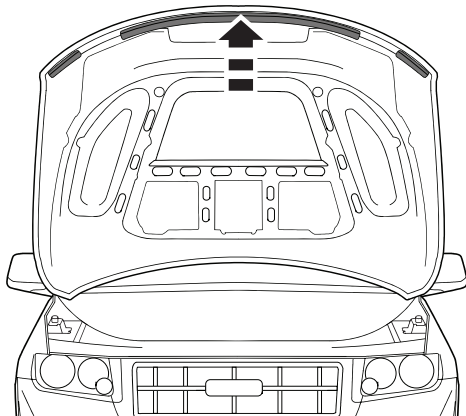

1

Remove (4) plastic seal retaining fasteners that align with the pre-drilled holes and tabs in the hood shield. Next, carefully separate the hood seal / gasket from the areas of the hood that align with the hood shield tabs.

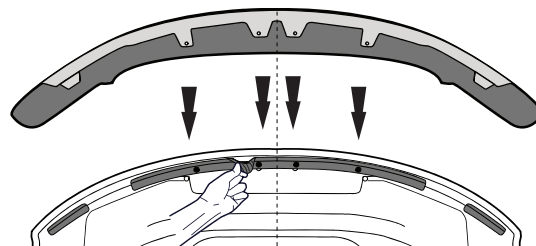

**NOTE:** Exercise extreme caution not to tear or damage the hood seal / gasket when separating from hood.


2

# Installation Steps

**NOTE:** Actual application may vary slightly from illustrations.


Alcohol Pad

Use an alcohol pad to clean the hood surface underneath the OUTBOARD rubber trim pieces.

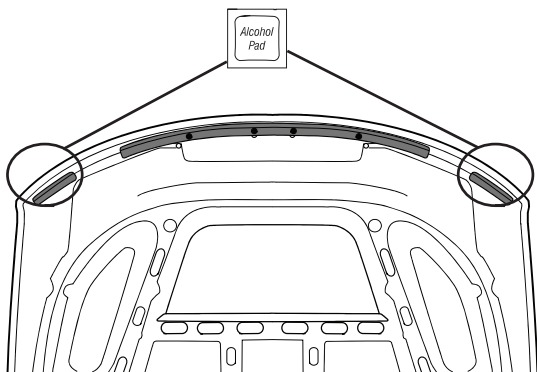


3


Remove red tape liners from both OUTBOARD tabs of hood shield.

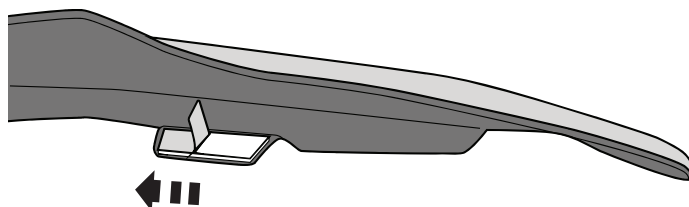

4

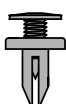


Separate each fastener assembly into two pieces.

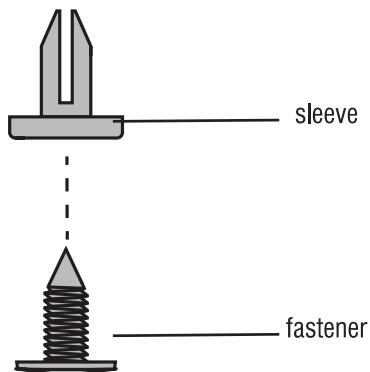

5

Carefully lift the weatherstrip away from the hood surface at the same (4) locations to expose holes in hood.

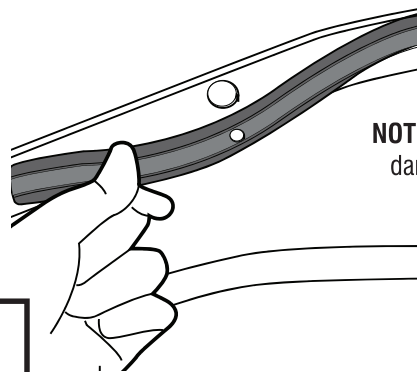


**NOTE:** Use caution not to damage weatherstrip.

6




Press (4) sleeves into the holes. If necessary use tape to hold them firmly in place.

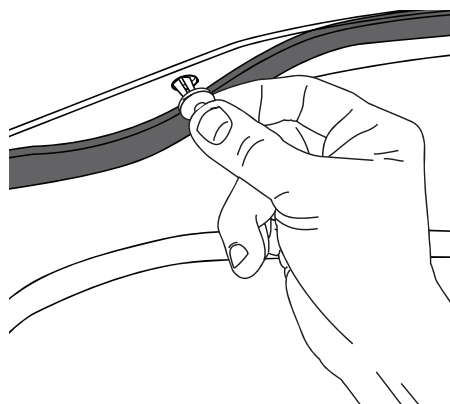

7

Reposition the hood shield with the tabs sliding between the hood and rubber seal and align with holes.

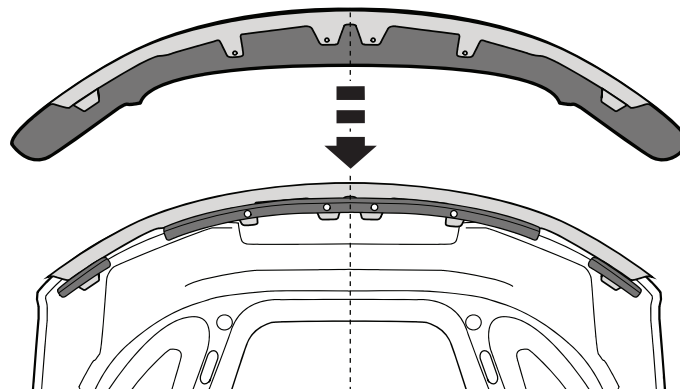


8

## Installation Steps


**NOTE:** Actual application may vary slightly from illustrations.



Insert (4) fasteners through the rubber gasket, hood shield, and into the sleeve. Securely tighten.

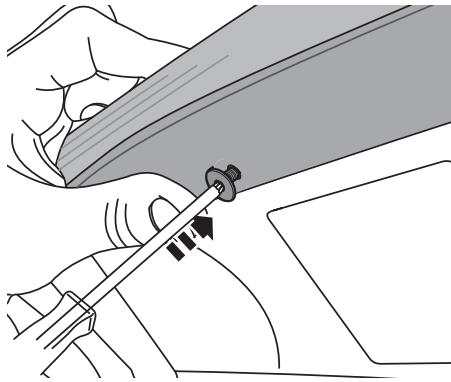


**4X**

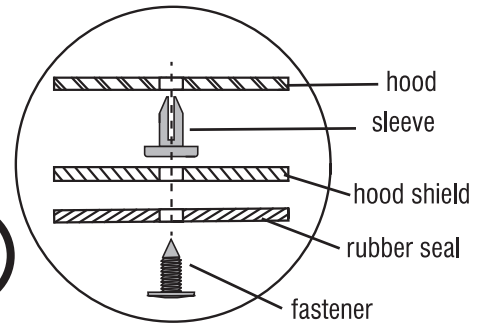

**9**


**DO NOT OVER TIGHTEN**

Apply firm pressure to OUTBOARD tabs to ensure adhesion of tape to hood surface.

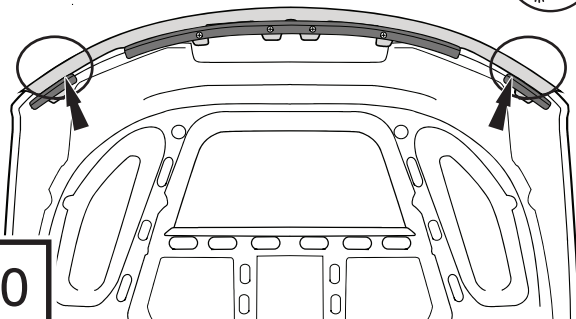


**10**

Turn both of the hood bumpers counter clockwise 1 1/2 turns.

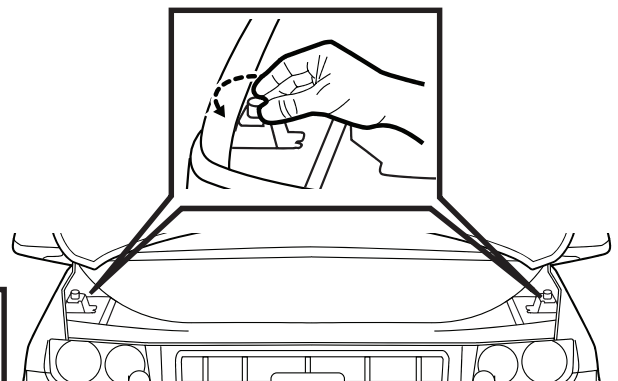

**11**


Close Hood.

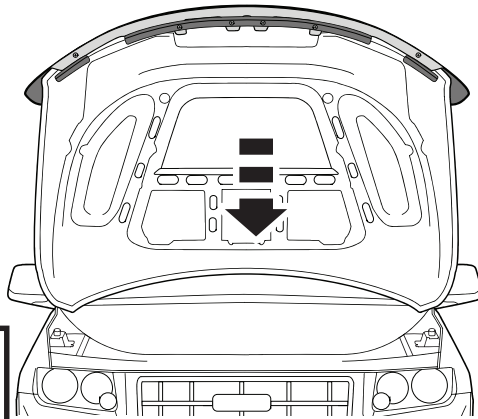

**12**



Apply (2) bump ons to surface of hood.

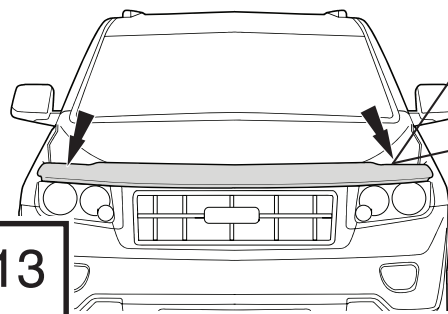

**13**

## Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



## Congratulations!

You have purchased one of the many quality Husky® branded products. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



1-800-344-8759 • Visit us at [huskyliners.com](http://huskyliners.com)

© 2024 Husky Liners, Inc. All rights reserved.

Husky® and the Husky® logo are trademarks of Husky Liners, Inc.